



### UNLOADING THE FILM

**Rewind Button.**  
When you have finished the film, you must rewind it one full revolution. First bring the rewind button forward at the bottom of the camera body.



**Rewind crank.**  
While pressing the rewind button, pull out the rewind crank. Turn it in the direction indicated by the markings until you feel the resistance.



**Removing the film.**  
Select a place in the shade and keep the camera upright. To check that the film is fully rewound, advance the film end out of the rewind crank window. If not, the film is in the camera.



### ACCESSORIES



**Petri Lens Hood**  
The Petri lens hood has been carefully designed to prevent unnecessary light from entering the lens of your camera. It is constructed of light alloy metal and is easily attached to enhance the beauty of the Petri 7S camera.

**Petri Auxiliary Lens Set**  
Add extra coverage to your photography. Broad vertical picture coverage is obtained by the wide-angle lens. Each wide-angle lens, auxiliary magnifier and view-angle mirror, matching winder and stoppered case.

### Petri Filters

- UV Ultraviolet. Blocks ultraviolet rays.
  - V1 Yellow. Same as V1, but stronger effect.
  - TAB Orange. For photographing direct light.
  - B1 Red. For dramatic color and landscape effects.
  - PO1 Green. Landscape. Snow-look.
  - NDX4 Neutral density. For brilliant sunshine days.
- For Colour Photography**
- W4 Reduces camera lens.
  - C4 Reduces red in early morning or evening light.
  - CB For Blue Photography.
  - CL2 Daylight to artificial conversion filter.

PETRI CAMERA COMPANY, INC.  
22-27 7th Avenue, Astoria 14, Tokyo, Japan.



## INSTRUCTION BOOK PETRI 7S

