

# PENTAX

## LXファインダーシステム の使い方 LX INTERCHANGEABLE VIEWFINDERS

### ファインダー交換の方法

#### ファインダーをはずすとき

カメラのファインダーロックレバーを→の方向に押しながらかファインダーを⇨の方向へ静かに引いてはずします。



Before attaching your new LX Interchangeable Viewfinder to the camera, remove the existing finder by moving the finder release lever counter-clockwise and sliding the unit away from the camera as shown (for cameras not equipped with a finder, remove the protective body cap in the same manner). When removing a finder, be sure to slide it very carefully and slowly so as to avoid dropping it. After removal, cover it with the protective finder base cap to protect against dust and scratches.

**Attaching the new finder:** Align the finder with the body, making sure it matches up with the

#### ファインダーをつけるとき

⇨のミゾを左右とも合わせ、ファインダーをさし込み⇨の方向に止まるまで押します。止まった後、逆方向に引いてロックされたことを確認してください。



grooves properly as shown. Then, slide it slowly and smoothly toward the front of the camera until it locks firmly in place. When attaching a finder it's a good idea to jiggle it to make sure that it is securely attached.

**IMPORTANT:** Avoid touching the glass surfaces of the finder, eyepiece and camera body when attaching or removing the finder to protect against possible damage from fingerprints, dust, grit and grease. When absolutely necessary, use a blower or camel's hair brush to remove loose dust or grit and ensure the brightest, cleanest image.

## 視度の合わせ方

FA-1・FA-1W・FA-2の視度調節は1図のようにファインダーを途中まで取りつけ、ファインダーを見ながら視度調節ダイヤルを視度アジャスターで回します。2図のクロスマイクロの線がはっきり見えるように合わせます。FD-1・FE-1は接眼部鏡胴を回して合わせます。


## システムファインダーの使い方

### ● ベースマウントキャップの使い方 [ 3 図 ]

FB-1のベースマウントキャップは左に回すとはずれます。取りつけるときは赤と白のマークを合わせてマウントに押しつけ、右に止まるまで回します。

### ● アイピースの取り付け [ 4 図 ]

赤いマークを合わせてマウントに押しつけなが

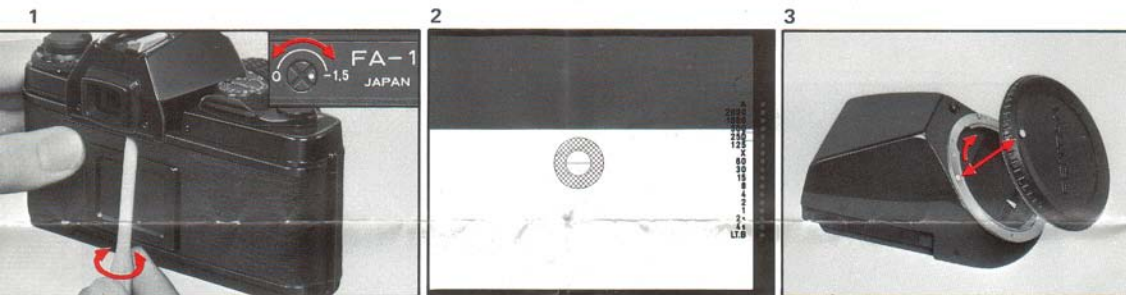

**Pentax FA-1, FA-1W and FA-2 Eye-Level Finder Models:** The three FA Series finder models offer built-in diopter correction, a unique feature for an eyelevel finder. To adjust the diopter to suit your vision, first move the finder release lever counter-clockwise and gently slide the finder away from the body, until the diopter adjustment screw is visible.

Then, with the finder in this position, bring the camera up to your eye and point it toward a light colored surface or wall. Using the tool packed with the finder, turn the adjustment screw as shown in Fig. 1 until the border lines of the center spot come in sharp and crisp (Fig. 2). Remove the tool and slide the finder toward the front of the camera

body once again to lock it securely in place. Additional correction is possible using SMC correction lenses which fit over the viewfinder eyepiece. Check your eye doctor for the diopter range best suited for your needs.

**FE-1 Magni-Finder, FD-1 Magni-Eyepiece:** Both the FE-1 Waist-Level Finder and the FD-1 Magni-Eyepiece for the System Finder also feature built-in diopter correction. To adjust the degree of diopter with either unit, simply rotate the eyepiece ring until the image comes in sharply.

### FB-1 System Finder and Eyepieces

The LX's versatile System Finder consists of the FB-1 Finder Base unit (Fig. 3) and three optional

ら右に回すとカチッと音がしてロックされます。はずすときは 5 図のアイピースロックボタンを押して左に回します。アクションアイピースFC-1はウエストレベルの状態ではずします。

● **アクションアイピースの操作** [ 6 図 ]

アイピース部を右に半回転するとアイレベルに、左に半回転するとウエストレベルになります。

## ウエストレベルファインダーの使い方

上部カバーを持ち上げると開きます。ルーペを出すときは、カバー裏のスプリングを前へ押しします。

たたむときは、ルーペのそばのボタンを押してルーペをたたみ、上部カバーを閉じます。

4



5



6



viewing eyepieces. All three of the eyepieces bayonet mount to the base unit.

**To attach the eyepiece:** First remove the eyepiece mount cap from the base unit by turning it counter-clockwise until it separates from the mount (Fig. 3). Then, align the red index dot on the rim of the eyepiece with that on the mount (Fig. 4).

Seating the eyepiece against the mount, rotate it clockwise until it clicks in place with a click (the red index on the rim of the eyepiece will be on an exact vertical plane).

**To remove the eyepiece:** Press the eyepiece lock release button shown in Fig. 5 and turn the eyepiece counter-clockwise until it separates from the mount.

**FC-1 Action Eyepiece:** When removing the Action Eyepiece, first position it for waist-level viewing.

The eyepiece rotates counter-clockwise for waist-level viewing, and clockwise for eye-level viewing.

**FF-1 Waist-Level Finder:** Raise the top cover of the finder and fold it out for viewing. When you wish to use the magnifier, push the spring at the rear of the cover forward.

To close the finder, press the button adjacent to the magnifier and fold in the magnifier, then fold the top cover over it.





Asahi Optical Co., Ltd. C.P.O. 895, Tokyo 100-91, JAPAN  
 Asahi Optical Europe N.V. Weveldlaan 3-5, 1930 Zaventem Zuid-7, BELGIUM  
 Pentax Handelsgesellschaft mbH. 2000 Hamburg 54 (Lokstedt), Grandweg 64, WEST GERMANY  
 Pentax Corporation 35 Inverness Drive East, Englewood, Colorado 80112, U.S.A.  
 Pentax Canada Inc. 1760 West 3rd Avenue, Vancouver, B.C. V6J 1K5, CANADA  
 Pentax U.K. Limited Pentax House, South Hill Avenue, South Harrow, Middlesex HA2 0LT, U.K.  
 Asahi Optical Brasileira Ind. e Com. Ltda. Rua Estados Unidos, 1053, São Paulo-SP, BRASIL

06571

Printed in Japan

形式 Type	視度 Diopter Range	倍率 Magnification	幅×高×厚 W x H x D	重さ Weight	備考 Notice
FA-1 Eye-Level Finder*	-1.5 ~ 0	0.9	52 x 36 x 56 mm	95g	正立正像
FA-1w Eye-Level Finder	-3 ~ +1	0.84	52 x 36 x 56	95	
FA-2 Eye-Level Finder*	-1.5 ~ 0	0.9	52 x 36 x 54.5	86	
FB-1 System Finder Base	—	—	52 x 40.5 x 78	130	
FC-1 Action Eyepiece	-0.95	0.55	52 x 47 x 49	130	
FD-1 Magni-Eyepiece	-4.5 ~ +3.5	1.0	φ49.5 x 41.5	145	
FD-2 Standard Eyepiece	-1	0.84	φ49.5 x 16.5	43	
FE-1 Magni-Finder*	-5 ~ +4	1.35	52 x 55 x 50	150	左右逆像
FF-1 Waist-Level Finder*	-1.1	1.05	52 x 31.5 x 50	72	

\* 視度調節範囲の変更は下記の3種を各サービスセンターで取り扱っております(有料)

① -3~-1.5、② 0~+1.5、③ +1.5~+3

\* The image is reversed with the FE-1 and FF-1 Finder models.



旭光学工業株式会社

●174 東京都板橋区前野町2丁目36番9号(960)5151(代)

旭光学商事株式会社

●100 東京都千代田区永田町1丁目11番1号(580)2051(代)

●お問い合わせは各サービスセンターへ

東京 ●104	東京都中央区銀座西8丁目10番地	☎ 03(571)5621(代)
札幌 ●060	札幌市中央区南大通り西11丁目4番27号	☎ 011(241)8742(代)
仙台 ●980	仙台市中央2丁目2番10号 仙台会館	☎ 0222(61)5681(代)
横浜 ●231	横浜市中区不老町1丁目4番6号 東明ビル	☎ 045(681)8771(代)
名古屋 ●461	名古屋市東区泉1丁目10番8号	☎ 052(962)5331(代)
大阪 ●542	大阪市南区堀町通1丁目1番地	☎ 06(271)7991(代)
広島 ●730	広島市中区中町8番12号 広島フロンティアビル	☎ 0822(48)4321(代)
福岡 ●810	福岡市博多区中洲中島町3番8号	☎ 092(281)6868(代)
新潟 ●951	新潟市本町通七番町1153番地 東興第一ビル	☎ 0252(24)8391(代)
静岡 ●420	静岡市伝馬町24番2号 住友建設ビル	☎ 0542(55)6308(代)
金沢 ●920	金沢市尾張町2丁目8番23号 太陽生命ビル	☎ 0762(22)0501(代)
高松 ●760	高松市鍛冶町6番地12 地田ビル	☎ 0878(21)7650(代)
●消費者相談室 ●104	東京都中央区銀座西8丁目10番地	☎ 03(572)6479(代)

☆記載内容の仕様などの一部が変更される場合があります。

04-8107